Quick User Guide

Installation and operation snom Flexor Manager™

1 Download Flexor Manager

1. Click on the download link in the e-mail.
2. Copy your license key from the e-mail by using “Strg + V“.
3. Close MS Outlook.
4. Follow the instructions of the “Flexor Manager Setup“.
   - » .NET Framework 3.5 gets installed on your computer.
     This is inevitable to assure a correct installation of the snom Flexor Manager™.

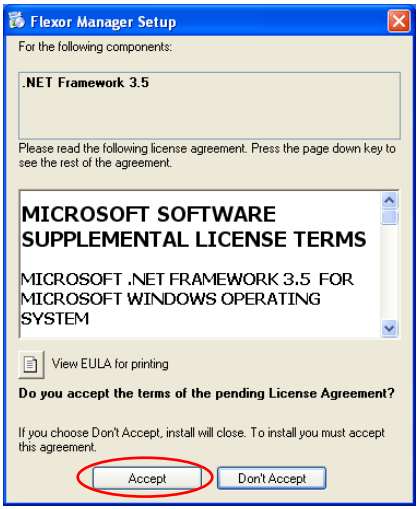
Flexor Manager Setup
For the following components:
.NET Framework 3.5
Please read the following license agreement. Press the page down key to see the rest of the agreement.
MICROSOFT SOFTWARE SUPPLEMENTAL LICENSE TERMS
MICROSOFT .NET FRAMEWORK 3.5 FOR MICROSOFT WINDOWS OPERATING SYSTEM
View EULA for printing
Do you accept the terms of the pending License Agreement?
If you choose Don't Accept, install will close. To install you must accept this agreement.
Accept
Don't Accept

2 Install Flexor Manager

1. Follow the instructions of the wizard “Flexor Manager“.
   - » The snom Flexor Manager™ gets installed on your computer.

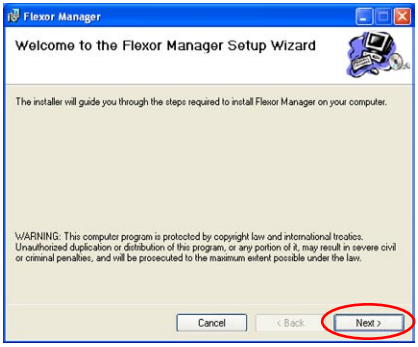
Flexor Manager
Welcome to the Flexor Manager Setup Wizard
The installer will guide you through the steps required to install Flexor Manager on your computer.
WARNING: This computer program is protected by copyright law and international treaties. Unauthorized duplication or distribution of this program, or any portion of it, may result in severe civil or criminal penalties, and will be prosecuted to the maximum extent possible under the law.
Cancel
< Back
Next >

3 Configure Flexor Manager

1. Start the snom Flexor Manager™: “Start“ > “All programs“ > “Camrivox Flexor Software“ > “Flexor Manager“.
2. Follow the four steps of the wizard “Getting Startet with Camrivox Flexor Software“.

Getting started with Camrivox Flexor Software
Welcome Check (Stage 1 of 4)
Welcome Check
License Check
Find Devices
Summary
flexor software
Welcome
This wizard will help you setup Flexor Software for the first time.
You can see the progress of the setup on the left hand side, when each 'light' is green setup is complete.
When each stage is complete a continue button will appear, click this to move to the next stage.
Checking validation server connection ... OK.
Continue >>

4 Add snom phone

1. Do a right-click on the symbol of the Flexor Manager in the taskbar.
2. Click on “Devices and Applications”.
   - » The window “Devices and Applications” opens.

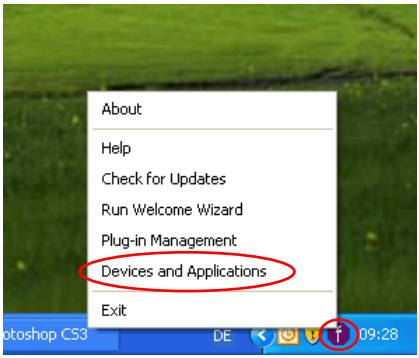

3. Do a right-click on the white area and click on “New“ > “Flexor Connect for snom IP Phones“.
   - » The window “Add Devices“ opens.

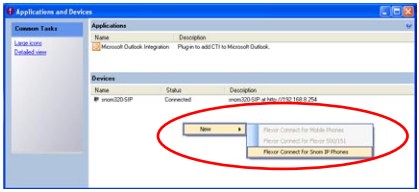

4. Click on “Add Manually >“.
5. Enter the IP address of your phone.
6. Click on “Connect“.
7. Click on “Add“.
   - » Your phone is now connected to the snom Flexor Manager™.
8. Start MS Outlook.

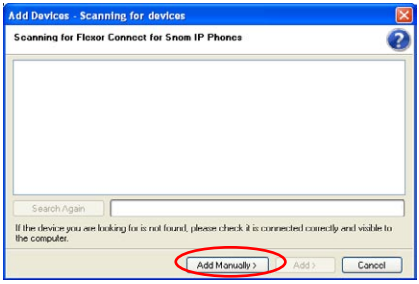
Add Devices - Scanning for devices
Scanning for Flexor Connect for Snom IP Phones
Search Again
If the device you are looking for is not found, please check it is connected correctly and visible to the computer.
Add Manually >
Add >
Cancel

5 Call a contact out of MS Outlook and receive a call

Call a contact:

- » Click on the call button in the according contact window.

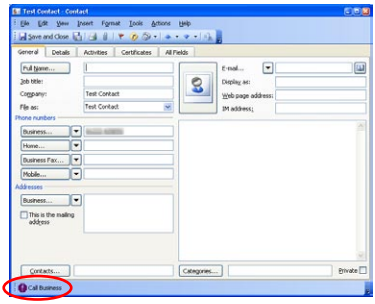

Receive a call:

- » A window “Journal Entry“ pops up.